



## 8.9 SD Card Alarm

- The GREEN MACHINE will operate when there is a SD Card Alarm, but the card will not or cannot record the data.
  
- The SD Card Alarm will activate when the following items occur:
  1. An SD Card is not installed in the Controller slot.
  2. The SD Card write protection is ON.
  3. When the SD Card is not inserted in to the slot properly.
  
- Correct the above problem(s) and the SD Card Alarm will clear.