

VST Installation Procedure for Phase II Coaxial EVR Balance Dripless Nozzles

Part Number Series: VST-EVR-NBcc, VST-EVR-NBccR
cc = Scuff Guard Color Code and R = rebuilt



Vapor Systems Technologies, Inc.

650 Pleasant Valley Drive
Springboro, Ohio 45066 (USA)

Toll Free: 1-888-878-4673

Phone: 937-704-9333

Fax: 937-704-9443

www.vsthose.com

For VST Model #'s:

**VST-EVR-NB, VST-EVR-NB (Rebuilt),
VST-EVR-NB (G2), and VST-EVR-NB (G2 Rebuilt)**

GENERAL INFORMATION

If hanging hardware components are involved in a drive-off or incur other customer abuse, each individual component must be functionally tested prior to customer dispensing activities.

INSTALLATION PREPARATION

This procedure must be followed to insure leak-proof installation and operation of these nozzles.

1. Turn off and tag the power to the dispenser. Dispenser must be de-energized prior to service to avoid personal injury.
2. Barricade work area to block vehicle access to the dispenser.
3. Close the dispenser shear valve prior to removing hanging hardware (hoses, safety breakaways, and nozzles).
4. Drain liquid product from the hanging hardware set into an approved container prior to replacing any hanging hardware components.
5. Remove hanging hardware from the dispenser prior to making replacement component assembly connections. VST recommends connecting the whip hose to the dispenser as the last connection during the hanging hardware assembly.


INSTALLATION and Function Tests

STOP! If this is a new facility installation, the fueling point must be flushed into an approved container before installing the nozzle. Using this nozzle to flush the system could result in foreign material becoming lodged in the nozzle's valve and cause it not to shut off.

1. Initial inspection and function tests:
 - a. Carefully unpack nozzle from shipping carton.
 - b. Inspect nozzle exterior for any damage.
 - c. Inspect threads, lever, lever lock, spout, collection sleeve, band clamps, and face seal to determine that they are present and undamaged.
 - d. Verify interlock rod alignment. Check interlock for engagement and release. Proper function of interlock rod requires the nozzle collection sleeve to be compressed ¼" to ½" and the lever to be engaged into the dispensing position. Nozzle will not function without interlock rod properly engaged.
 - e. Inspect spout vent hole. It should be clear of debris.

Figure 1.

EVR Hanging Hardware Assembly

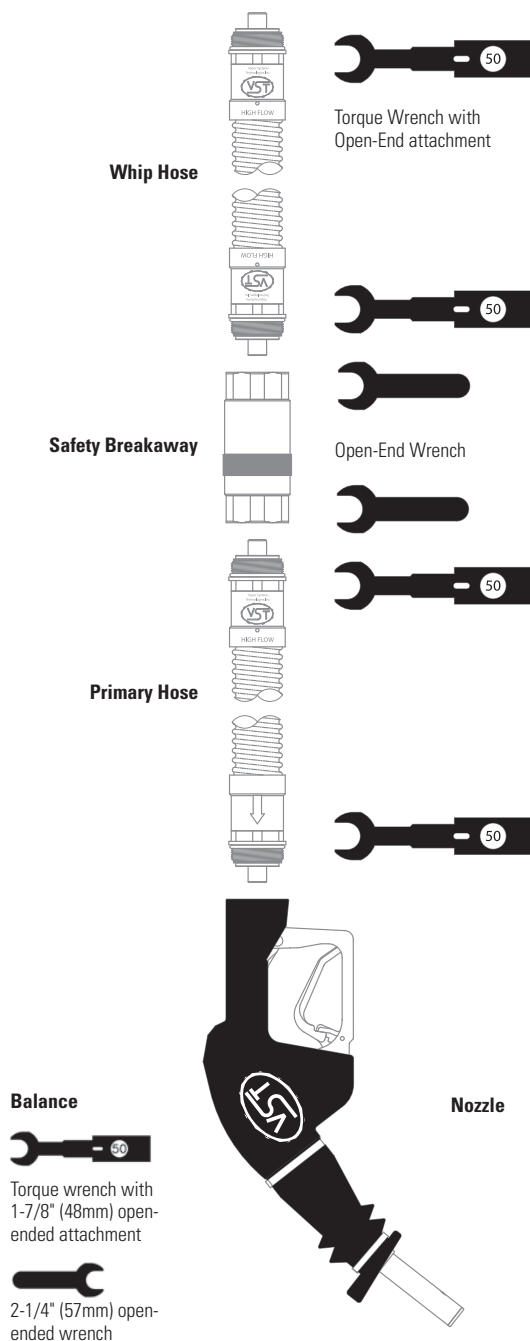

VST Installation Procedure for Phase II Coaxial EVR Balance Dripless Nozzles

Part Number Series: VST-EVR-NBcc, VST-EVR-NBccR

cc = Scuff Guard Color Code and R = rebuilt



Vapor Systems Technologies, Inc.

650 Pleasant Valley Drive
Springboro, Ohio 45066 (USA)

Toll Free: 1-888-878-4673

Phone: 937-704-9333

Fax: 937-704-9443

www.vsthose.com

2. Lightly lubricate ALL O-Rings on mating connections with petroleum jelly or other suitable lubricant. DO NOT USE pipe dope or thread sealant.
3. Attach nozzle onto mating hose connection and tighten by hand.
4. Tighten the nozzle connection to 50 ft-lbs of torque. DO NOT OVER TIGHTEN. Use a torque wrench with an open-end attachment to fit the hose couplings and an open-end wrench to properly tighten coupling connections. DO NOT USE channel-locks or pliers to tighten hose joints. Proper ft./lb. torque may not be achieved with these tools.
5. Purge air from the system by pumping one-tenth (1/10) to two-tenths (2/10) of a gallon of fuel into an approved container. Inspect the nozzle connection for liquid leaks and make proper adjustments at hose connection if necessary.
6. Check the nozzle shut-off action by dispensing fuel into an approved container at least three times to assure the proper automatic operation of the interlock rod. The fuel flow-rate must be greater than 3 gpm for the automatic shut-off mechanism to operate.

To test, operate the nozzle and submerge the spout tip in fuel until the fuel level covers the vent hole. The main valve of the nozzle automatically shuts off when the liquid covers the vent hole at the end of the spout. The nozzle is not designed to operate on gravity flow. The hold-open latch will disengage automatically when liquid covers the vent hole in the spout. Verify that the fuel flow stops when the nozzle collection sleeve is decompressed (e.g. interlock rod is disengaged). To test that the fuel flow stops, dispense some fuel into an approved container. Slowly remove the nozzle from the container while dispensing fuel. Fuel flow should stop when the nozzle collection sleeve is fully decompressed.

7. Measure the resistance between the dispenser outlet casting and the tip of the nozzle spout. Use an electronic multimeter set on the high range of the ohmmeter function. Resistance should not indicate more than 70,000 ohms per foot of hose. Example: The measured resistance for a 12-foot hose must not exceed 840,000 ohms (840 kilohms).

MAINTENANCE

Inspect nozzles daily for damaged component parts: vapor collection sleeve, face seal, interlock rod, spout, lever, lever lock, etc. Damaged components must be replaced. Vent hole at the end of the spout should be clear of debris. The nozzle will not operate properly if vent hole becomes clogged. The nozzle will not function properly without the interlock rod properly engaged. Keep the hose connections tight.

Should there be a drive-off or incidence of customer abuse, follow the initial inspection instructions found in the INSTALLATION section. The nozzle should be replaced when damaged. The nozzle is designed and constructed to give lasting service if properly handled and maintained. If for any reason it should need attention, contact your VST distributor for proper disposition.

NOTE

Due to abuse, misuse, changing gasoline formulas, variation in maintenance practices, environmental conditions, and/or conditions beyond the manufacturer's control, dispensing equipment may need replacement before five (5) years. Inspections and proper maintenance procedures should be followed by the station manager to determine if replacement is required before five (5) years.

WARNING

Unauthorized rebuilding or modifying of nozzles voids ALL approvals and warranties.

VST products must be used in compliance with applicable federal, state, and local laws and regulations.

If local regulatory codes prohibit use of the nozzle's hold-open clip, it must be removed prior to nozzle installation. Remove the nozzle to a safe work area.

Place the nozzle on a flat surface.

Locate the alloy rivet securing the hold-open clip and spring in the nozzle's handle. Use a drill with a 3/16" (5mm) drill bit, drill out the rivet securing the hold-open clip, and discard the clip, spring, and all other rivet debris.

CUSTOMER COPY

**To be left at gasoline dispensing facility (GDF)
at time of installation**

Manufacturing Date:
(SEE BOX LABEL)

Serial Number: (Fill in at time of installation)

VST Warranty Statement

This limited warranty is given by Vapor Systems Technologies, Inc. (hereinafter VST) to the initial purchaser, and any subsequent purchasers of new equipment, within the warranty period of products manufactured by VST. VST products:

- Are factory tested and meet all applicable performance standards and specifications.
- Should be used in compliance with all applicable federal, state, and local laws and regulations to which they were certified.
- Are warranted to be free from defect in material and workmanship with ongoing compliance to all applicable performance standards and specifications under normal use, service, proper installation, inspections, and maintenance practices per manufacturer specifications.

VST warrants the materials and workmanship to be free from defects in accordance with the following provisions:

1. This warranty does not apply to any products that have:
 - Been subject to misuse, abuse, tampering, negligence, accident, or drive off.
 - Been misapplied, improperly installed, or not installed per VST’s instructions and specifications.
 - Been modified, altered, rebuilt or repaired by unauthorized persons or outside the criteria of VST specifications.
 - Been improperly maintained and/or improperly inspected in accordance with the system’s or product’s periodic maintenance schedule, and any inspection and/or maintenance requirements imposed by the State or any government agency.
 - Been exposed to contact with fuels containing greater than 5% methanol, 10% ethanol, or 15% MTBE by volume or any exposure to M85/E85 fuel, unless the product is rated for that type of fuel.
 - Been subject to damage resulting from acts of God.
2. This warranty does not cover and VST is not responsible or liable for:
 - Incidental, consequential and/or indirect damages or loss including, but not limited to, personal injury, death, property damage, environmental damage, cost of labor, clean-up, downtime, installation and removal, product damage, and loss of product, revenue or profits.
 - Any claims or lawsuits against the purchaser and/or distributor.
 - Labor or materials necessary to disconnect or connect the warranted product for return to VST.

VST products used on systems that have not been listed by a nationally-recognized testing laboratory (NRTL) or use that falls outside intended field of use voids all warranties.

The duration of this warranty is TWELVE (12) MONTHS from the time of installation provided timely valid proof of installation is submitted to VST. Valid proof of installation options include, but are not limited to:

- VST Product Warranty Registration Card is properly completed and returned to VST at time of installation and within (6) SIX MONTHS from the date of manufacture.

OR

- In lieu of a legitimate, completed and returned VST Product Warranty Registration Card within the first (6) SIX MONTHS from the date of manufacture, VST requires the following:
 1. A completed gasoline dispensing facility (GDF) monthly maintenance log from the month in which the VST equipment was installed and documented, **AND**
 2. One of the following documents that may be used as a reference installation date:
 - A valid distributor invoice
 - A valid contractor invoice

The above options must be clearly marked with:

- All VST product serial numbers
- Product sale date and/or installation date
- Purchaser name, address, and phone number

If valid proof of installation is not received by VST, as noted above, the warranty period is TWELVE (12) MONTHS from the VST date of manufacture.

In the event of a warranty claim:

- The purchaser/distributor must obtain a copy of a Return Goods Authorization (RGA) from VST prior to returning product so as to ensure proper processing. All warranty claim returns must be shipped freight prepaid by the purchaser and/or distributor.
- Warranty status will be determined upon inspection at VST's facility within THIRTY (30) DAYS of receipt by VST of the warranted products. All returned merchandise deemed Not Under Warranty; will be held by VST for SEVEN (7) BUSINESS DAYS prior to disposal. Return of this product to the purchaser/distributor will require purchaser/distributor to issue a call tag within SEVEN (7) BUSINESS DAYS of notification.
- Repair or replacement of the warranted product is the **EXCLUSIVE REMEDY** under the terms of this warranty. No other warranty exists.

VST, as to each defect, shall be relieved of all obligations and liabilities under this Limited Warranty if the products have been operated with any accessory, equipment, or a part not specifically approved by VST and the appropriate governing regulatory agencies.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES. VST MAKES NO OTHER WARRANTIES (WHETHER WRITTEN OR ORAL), EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHERWISE, AND ANY OTHER SUCH WARRANTIES ARE HEREBY DISCLAIMED.

VST NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON OR ENTITY TO ASSUME FOR IT OR BIND IT TO ANY OTHER LIABILITY OR OBLIGATION RELATED TO OR IN CONNECTION WITH THIS LIMITED WARRANTY.

VST reserves the right to make changes at any time to prices and designs, or make additions or improvements with respect to its products, without incurring any obligation to modify or install same on previously manufactured products.

✂ Cut along dotted lines for both the Return Tag and the Warranty Registration Card

Warranty Registration Card:

- Cut Out
- Fill out completely
- Return to VST for Warranty Registration at time of installation

Product Return Tag:

- Cut Out
- Fill out completely when submitting a Warranty Return Claim
- Include completed form in box with Warranty Return Claim product
- Include RGA paperwork



Nozzle Return Tag

No warranty accepted without tag filled out and attached to product.

ASC Company: _____

Site Name: _____

ASC Tech Name: _____

Site Street Address: _____

ASC #: _____

Site City, State & Zip: _____

Service Date: ____ / ____ / ____

Site Phone #: ____ - ____ - ____

Claim Serial #: _____
(product removed from service)

Nozzle Type (check one):

Replacement Serial #: _____

- Balance Assist Conventional

Check reason for return - at least one box below must be checked to be considered for a warranty claim:

- Connection or thread problem
- Failed A/L test (applies to Assist only)
- Failed regulatory test ----->
- Leaked fuel ----->
- Lever always live
- Nuisance shut off
- Would not dispense
- Would not shut off
- Other claim - explain (use space to the right)----->

Specify the test that failed: _____
Specify location of the leak: _____

Please explain any "Other claim" below: _____

This side of tag to be filled in by ASC



Vapor Systems Technologies, Inc.

Phone: (937) 704-9333 • Fax: (937) 704-9443
www.vsthose.com

**IMPORTANT
PRODUCT WARRANTY
REGISTRATION CARD**

(FILL OUT WARRANTY REGISTRATION CARD COMPLETELY)

See VST Warranty Statement for complete Warranty details.

A copy of the VST Warranty Statement is included in every product carton.

PRODUCT STYLE:

- HOSE
- NOZZLE
- PROCESSOR
- SAFETY BREAKAWAY
- OTHER

SERIAL NUMBER:	_____
INSTALLATION DATE:	_____
INSTALLATION SITE NAME:	_____
INSTALLATION CITY/STATE/ZIP:	_____
INSTALLATION SITE PHONE NUMBER:	_____
DISTRIBUTOR NAME:	_____

✂ Cut along dotted lines for both the Return Tag and the Warranty Registration Card

Product Return Tag:

- Cut Out
- Fill out completely when submitting a Warranty Return Claim
- Include completed form in box with Warranty Return Claim product
- Include RGA paperwork

Warranty Registration Card:

- Cut Out
- Fill out completely
- Return to VST for Warranty Registration at time of installation

Nozzle Return Tag

No warranty accepted without tag filled out and attached to product.

Distributor Name: _____

Street Address: _____

City, State & Zip: _____

Distributor Phone #: _____

RG#: _____

Distributor should check off "all" of the below items for accurate warranty claim processing:

- RGA number is obtained and filled in on this side of tag
- "Claim serial number" is validated (refer to other side of tag)
- "Replacement serial number" is filled in (refer to other side of tag)
- Verify the "reason for return" is filled in (refer to other side of tag)

Return product to: Vapor Systems Technologies, Inc. **Phone:** 1-888-VST-HOSE
 650 Pleasant Valley Drive 1-888-878-4673
 Springboro, Ohio 45066 **Website:** www.vsthose.com 9535-001 01/21

This side of tag to be filled in by Distributor

Vapor Systems Technologies, Inc.
 650 Pleasant Valley Drive
 Springboro, Ohio 45066
