


### 8.7.1 Overfill Alarm Troubleshooting Steps

Steps	Procedures
<ol style="list-style-type: none"> <li>1. An overfill may cause the Vacuum Pump to seize, which may cause the Vacuum Pump motor to trip out on the thermal overloads.</li> <li>2. If an Overfill Alarm Activates while a test is running:               <ul style="list-style-type: none"> <li>• The test will terminate.</li> <li>• The Fault and Alarm Screen is displayed and the Overfill Alarm box will display RED.</li> <li>• An underground storage tank overfill is a serious situation that could damage internal components in the GREEN MACHINE.</li> <li>• An overfill might happen if the delivery person fails to stop fueling, ignoring both the overfill limit and the high-product limit.</li> <li>• VST has determined that overfill protection is needed to reduce the chance of gasoline entering the GREEN MACHINE.</li> <li>• Below are the precautionary measures taken to protect the GREEN MACHINE against an overfill situation:                   <ul style="list-style-type: none"> <li>• The VST Control Panel will disable the GREEN MACHINE when the UST level reaches the OVERFILL Alarm setting (OVERFILL: 90%) when the relay contacts open at the Fuel Management System.</li> <li>• Eventually, as fuel is dispensed, the product would drop below the OVERFILL Alarm threshold thereby resetting the relay and re-enabling the GREEN MACHINE.</li> <li>• The Fuel Management System OVERFILL ALARM will not guarantee that the GREEN MACHINE is protected from gasoline entering it.</li> </ul> </li> </ul> </li> <li>3. The table below lists the VST recommended alarm settings for the tank level.</li> </ol>	

Position of Tank Alarm Limits	VST Recommended Alarm Settings
Overfill Limit	90%

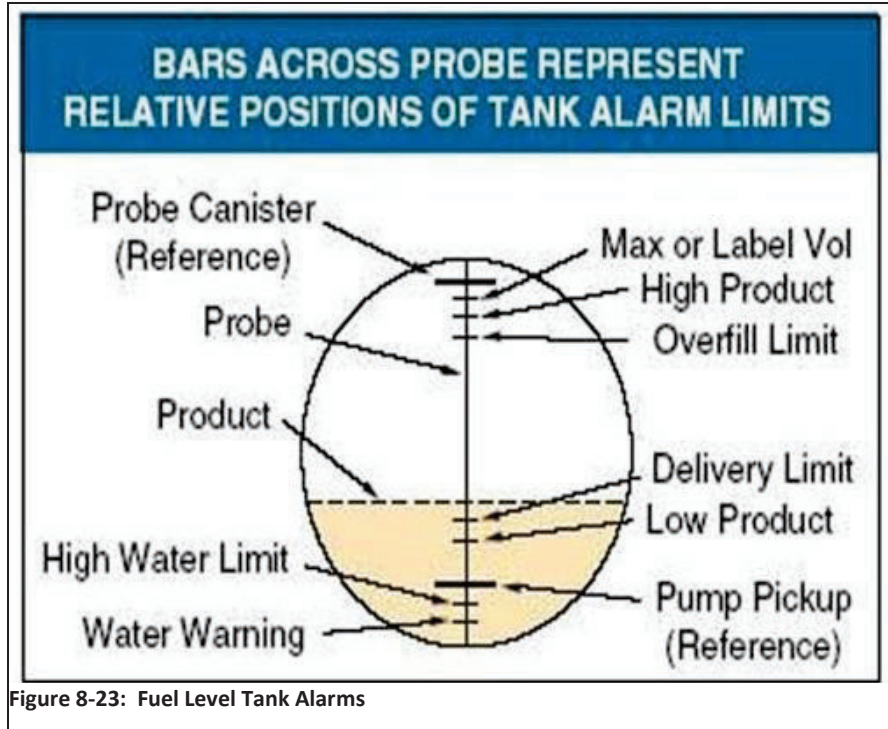

<b>Overfill Report</b>		
Date:		
Contractor Name:		
Contractor Company:		
GDF Name:		
Address:		
City:	State:	ZIP Code:
GDF Contact Person Name:		
GDF Contact Person Title:		
GDF Contact Person Phone:		
GDF Contact Person E-mail:		
Overfill Details		
Date of Overfill:		
Octane of the fuel being dispensed:		
Serial Number of the GREEN MACHINE:		

## 8.8 Digital Storage Alarm

- The GREEN MACHINE will operate when there is a Digital Storage Alarm, but the USB Drive will not or cannot record the data.
- The Digital Storage Alarm will activate when the following items occur:
  1. A Digital Storage Drive (USB Drive) is not installed in the PLC slot.  
OR
  2. When the Digital Storage Drive (USB Drive) is not inserted into the PLC slot properly. **See Figure 8-24**
- Correct the above problem(s), and the Digital Storage Alarm will clear.



Figure 8-24: USB Drive for Digital (data) Storage