## Executive Order VR-201-X and VR-202-X Assist Phase II EVR System

## Exhibit 8 REQUIRED ITEMS IN CONDUCTING TP-201.3

The instructions below are required when conducting TP-201.3 for these systems. The tester shall document that each step was followed as indicated below and shall include this page of the Exhibit with the submission of TP-201.3 test results. Note that districts may require use of an alternate form to meet these requirements, provided the alternate form includes the same minimum parameters.

- 1. Prior to conducting TP-201.3, all four ball valves on the Healy Clean Air Separator (CAS) shall be closed, as shown in Figure 8-1 or Figure 8-1H, to isolate it from the Underground Storage Tank (UST) system to permit the pressurization of the UST system. Figure 8-1 applies to vertical Clean Air Separator installations and Figure 8-1H applies to horizontal Clean Air Separator installations.
- 2. Conducting TP-201.3 with any dispenser piping test valve in the closed position is **not** permitted. Any dispenser with a dispenser piping test valve in the closed position while conducting TP-201.3 will bias the test towards compliance.
- 3. After conducting TP-201.3, the four ball valves on the Healy Clean Air Separator (CAS) shall be locked in their normal operating positions as shown in Figure 2-2 or 2-2H, Exhibit 2 of Executive Orders VR-201 and VR-202. Figure 2-2 applies to vertical Clean Air Separator installations and Figure 2-2H applies to horizontal Clean Air Separator installations.

Required Steps	Verification (please circle)	
All four Clean Air Separator ball valves closed before conducting TP-201.3	Yes	No
All dispenser piping test valves open before conducting     TP-201.3	Yes	No
3. All four Clean Air Separator ball valves in normal operating positions after conducting TP-201.3.	Yes	No

Test Company:	Facility Name:		
Print Name (Technician)	Signature	Date	
Technician Certification Number ICC or District Training Certification, as applicable)	Expiration Date		

FIGURE 8-1
Configuration of Healy Clean Air Separator to Conduct TP-201.3

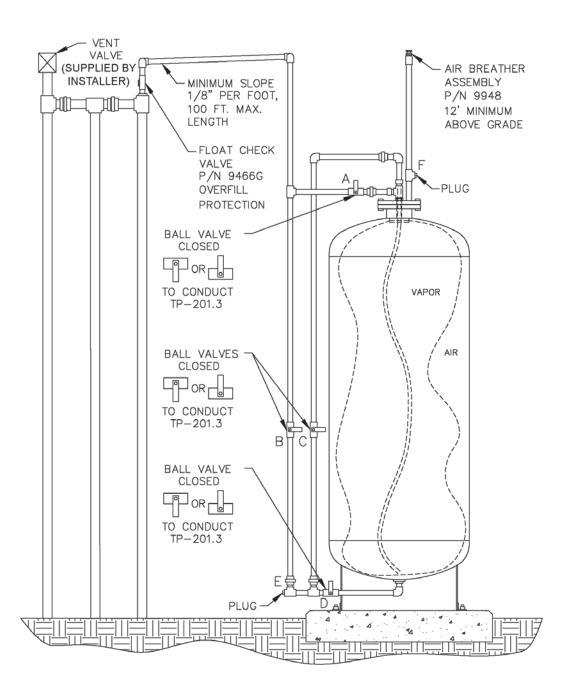


FIGURE 8-1H
Configuration of Healy Clean Air Separator to Conduct TP-201.3

